

## 2001 Honda / Acura Paint Label Description

Honda/Acura continues to implement new paint labels on their automobiles. For Some Models the plant number indicator has been replaced with a plant location letter placed on the lower right hand corner of the paint label.

Please use the key below to determine the plant location for your vehicle and to locate the formula best suited for the repair.

<b>Factory</b>	<b>11<sup>th</sup> Digit VIN</b>	<b>Production Plant Location</b>
-1 (=C)	C	Sayama, Japan
-2 (=S)	S	Suzuka, Japan
-3 (=A)	A	Marysville, Ohio (United States)
-4 (=H)	H	Alliston, Canada
-5 (=L)	L	East Liberty, Ohio (United States)
-6 (=T)	T	Tochigi, Japan
-15 (=G)	G	El Salto (Mexico)

The paint label may include the plant number and plant letter indicator, or either one alone. For Example B92P-3 = B92P-A

### PAINT LABEL EXAMPLE

1- Interior Code

2 – Exterior Code

3 – Non-paint information

4 – Plant Location

